



9.95 EUR

incl. 19% VAT, plus [shipping](#)

**Support:** [Utility](#) |  [USB-Pinout](#) | [Utility \[V2.0\]](#) | [Pinout hints \[DE/EN\]](#) |  [Pinout hints II \[EN\]](#)

- M3-ATX(-HV) serial cable
- For changing M3-ATX(-HV) variables
- Cable length=300mm

**Instructions :**

- 1) Shut down your PC, remove power from M3-ATX
- 2) Connect serial cable, one end goes into the M3-ATX, the other end goes into the motherboard's internal COM connector (please refer to the motherboard's manual for connector location).
- 3) Apply power to the PC, startup PC.
- 4) Using Windows XP or Windows Vista, launch the M3-ATX-SRL.exe programm.
- 5) Select desired attributes (ex. Offdelay, Hardoff) from the drop down list.
- 6) Change desired setting.
- 7) Shut down PC.
- 8) Remove power from M3-ATX, disconnect the serial cable and select your desired jumper setting.